


ELECTROSTRAINER® System



Installation Manual

Models: ES-200-PS / ES-150-PS

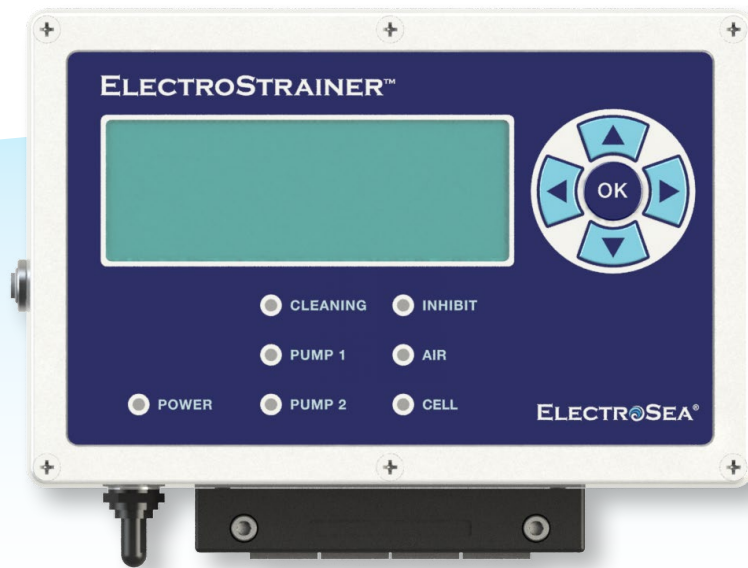

(888) 384-8881
(952) 475-8084



support@electrosea.com
www.electrosea.com

ELECTROSEA®

Introduction

Table of Contents	2
ElectroSea and ElectroStrainer System	3
Components	4
Safety Considerations	5
Pre-Installation Descaling of Seawater Conduits	5

Optimal Performance & Maintenance

Optimal Performance	6
Strainer Flow Alert	6
Cell Indicator	7

Installation Overview

Electrical Connection Overview	8
Seawater Connection Overview	9

Canister Installation

Canister Preparation	10
Mounting Options	11
Canister and Flow Sensor	12-13
Chlorinated Return Line to Canister	14
Canister Reassembly	15

Control Unit Installation

Control Unit Mounting and Wiring	16
Control Unit Wiring to Inhibit	17
Pump Mode and Time	18
Pump-Control Wiring	19
Example Pump-Control Schematics	20-21

Important Information

Specifications	22
----------------	----

COPYRIGHT © 2022

No part of this publication may be reproduced, translated, stored in a retrieval system, or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise without the prior written consent of ElectroSea, LLC. Every precaution has been taken in the preparation of this manual to ensure its accuracy. ElectroSea assumes no responsibility for errors and omission. Neither is any liability assumed for damages resulting from the use of this product and information contained herein.

Warranty Policy

Please visit our website at www.electrosea.com/warranty to view our full warranty terms and conditions.

ELECTROSEA®

ElectroSea was created when the owners of a sportfishing vessel invented “a better way” to prevent biofouling in their seawater cooling system. Solving complex technical problems is our expertise. With more than 100 issued U.S. patents and 350+ foreign patents in advanced technologies, our executive management team has been developing innovative solutions for more than 50 years. With an expert team of “old salts” who eat, sleep, and breathe boating, ElectroSea will improve your time on the water.

ELECTROSTRAINER® System

ElectroStrainer is a revolutionary seawater biofouling prevention device, a sea strainer, and a smart seawater flow-monitoring unit all combined into a single system. ElectroStrainer provides an entirely new way for boaters to prevent biofouling, barnacles, and bioslimes from clogging sea strainers and seawater pipes for air conditioners, chillers, and refrigerators. ElectroStrainer provides ease of use never seen before in a sea strainer and completely redefines seawater system maintenance.

- **ElectroStrainer is a Biofouling-Prevention Device:** ElectroStrainer continuously creates a safe and effective low level of chlorine to protect the entire seawater system. ElectroStrainer contains a Cell with a proprietary mixed metal-oxide coating. When electrified, it acts as a catalyst to generate chlorine naturally from the seawater passing through it. No chemical additives are required.
- **ElectroStrainer is a Sea Strainer:** Typical sea strainers become clogged as bioslime, algae, and barnacles build up over time in the strainer basket pores. ElectroStrainer solves this problem by preventing unwanted marine growth by generating chlorine directly inside its sea strainer basket. Strainer pores remain open, free, and clear so protected seawater can pass downstream to cooling equipment and decrease the frequency of strainer-basket cleaning.
- **ElectroStrainer is a Smart Seawater Flow-Monitoring System:** ElectroStrainer provides real-time monitoring with Smart Strainer Alert technology and automatically notifies you to check the strainer if it requires attention. ElectroStrainer monitors vessel seawater flow 24/7/365 days a year and displays the seawater flow rate in real time.

Components

The ElectroStrainer System includes the Control Unit, Canister Assembly, and all components listed below:

Control Unit

- (1) Control Unit
- (3) Cables
 - (1) Power: 20' (6.1 m)
 - (1) Cell: ES-200-PS: 20' (6.1 m), ES-150-PS: 12' (3.7 m)
 - (1) Flow Sensor: ES-200-PS: 20' (6.1 m), ES-150-PS: 12' (3.7 m)
- (4) Mounting Screws #10 x 1" (2.54 cm)



Canister Assembly

- (1) Canister, Strainer Basket, and Cell
- (1) ClearVis Flow Sensor
- (4) Hose Connectors
- (1) Top-Side Mounting Bracket
- (1) Bottom-Mounting Bracket
- (2) Machine Screws M5 Round Head
- (3) Machine Screws M6 Round Head
- (1) Lock Nut M6
- (1) Machine Screw M8 Round Head
- (8) Mounting Screws #12 x 1.25" (3.2 cm) Flat Head
- (1) Chlorinated Return-Line Tubing
- (1) Return-Line Tee-Fitting
- (1) Return-Line Valve
- (4) Return-Line Hose Clamps
- (1) Strain-Relief Clamp for Return-Line Tubing
- (1) Optional Return-Line Canister Cap



Major components are shown above.

Safety Considerations

Improper installation can result in unsatisfactory performance, premature failure, and damage to systems in the seawater circuit and/or to the vessel.

WARNING Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

CAUTION Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE Indicates a hazardous situation that can cause damage to personal property, the environment, or equipment.

Pre-Installation Descaling of Seawater Conduits

Pre-installation descaling ensures any existing biofouling that has accumulated on the interior seawater lines are removed. If seawater lines are impacted with barnacles and marine growth, ElectroSea recommends professional descaling prior to installing the ElectroStrainer System. By starting with descaled and clean seawater lines, you will realize the full benefit of the ElectroStrainer System. For new vessels, descaling is not necessary.

NOTICE ElectroStrainer is an all-in-one sea strainer and electrochlorination system. ElectroStrainer replaces existing sea strainers. If there is an existing sea strainer in the vessel, remove it and install the ElectroStrainer Canister in the same location.

NOTICE **DO NOT perform acid descaling after the ElectroStrainer System has been installed. Descaling acids will damage the ElectroStrainer and void the warranty.**

NOTICE Low seawater flow may damage the cooling system and other components that depend on this water for proper operation. It is the owner's responsibility to monitor the vessel's seawater flow rate and perform any necessary maintenance.

Optimal Performance

Constant Chlorinated Seawater Flow: The ElectroStrainer System should be powered ON and have seawater flowing through it whenever possible. This provides the vessel's seawater circuit with constant chlorinated seawater to prevent unwanted marine growth. Intermittent or stagnant seawater that is not continuously electrochemically treated allows growth of marine microorganisms. Barnacles have the innate ability to close themselves off and survive intermittent exposure to biocidal agents:

- DO NOT turn off seawater pumps, air conditioners, or chillers for an extended period of time.

Inspect the vessel for problem areas:

- Pre-existing biofouling in seawater lines prior to ElectroStrainer installation
- Clogged seawater intakes
- Impacted, blocked, or occluded lines from debris lodged in plumbing
- Sporadic demand valve areas (Depending on the system, valves that turn on and off can foster unwanted marine growth.)

Strainer Flow Alert

Strainer Flow Alert: The Strainer Flow Alert feature monitors seawater flow through the ElectroStrainer. This smart strainer system notifies the user if the ElectroStrainer basket contains debris, such as seaweed or mud; or part of the seawater circuit, such as the intake screen or thru-hull fitting, is partially blocked; or the seawater pump is producing low flow and requires maintenance. The Strainer Flow Alert feature allows the user to set a minimum seawater flow rate threshold value and time duration. If the seawater flow rate drops below the minimum value for a period of time, "CHECK STRAINER / FLOW ALERT" will flash on the display (no audible alert). Flow rate can be set in GPM or LPM, with the time duration set in minutes. To set the Strainer Flow Alert value, go to Menu, Flow Alert and enter the desired threshold flow rate and time duration for notification

NOTICE The Strainer Flow Alert feature is OFF by default and must be set up by the installer or end user.

NOTICE ElectroStrainer will continue generating chlorine even after a Strainer Flow Alert occurs.

If a Strainer Flow Alert occurs

1. Check vessel's intake screens for blockage or debris.
2. Check seawater pump output, impeller, or other causes of low flow.
3. Check ElectroStrainer basket for debris, seaweed, or mud.



-Pump Mode	-Cell
-Pump Time	-Default
-Flow Alert	-Update
-Display	-Exit

Cell Indicator

Cell Indicator: The Control Unit will display “SALINITY/CELL,” “% OUTPUT,” and illuminate the red Cell LED in various conditions. This is not an immediate cause for concern and may be temporary depending on seawater salinity level. ElectroStrainer will continuously attempt to generate chlorine and automatically resume standard operation when conditions are resolved. The Cell Indicator will be illuminated if any of the following conditions occur for multiple consecutive days:

- Water salinity is below 20 parts per thousand. (This is the most common cause of a Cell Indicator notice.)
- ElectroStrainer Cell Cable or its connectors have been compromised.
- ElectroStrainer Cell has excessive mud or other debris.
- ElectroStrainer Cell is at the end of its useful life.

Water Salinity

- Vessels often encounter brackish or fresh water when cruising inland or from extended storms and freshwater runoff.
- Low salinity is the most frequent cause of the Cell Indicator.
- ElectroStrainer will not display “CLEANING” or generate chlorine while the vessel is operating in fresh water.

RESOLUTION: Return vessel to seawater with adequate salinity.

ElectroStrainer Cell Cable

- The ElectroStrainer Cell Cable and connections must not be spliced, cut, compromised, or damaged.
- Inspect the Control Unit-to-Cell Cable carefully. Look for any corrosion at the connectors.

RESOLUTION: Replace the ElectroStrainer Cell Cable if it is compromised.

Excessive Mud or Other Debris


- If there is excessive mud or other debris, the ElectroStrainer Cell may require a brief rinse with fresh water.

RESOLUTION: Refer to the operation manual for instructions.

ElectroStrainer Cell at End of Life

- When the ElectroStrainer Cell has reached the end of its useful life, it can no longer generate chlorine. The Cell life is dependent on flow rate, hours of use, seawater quality, and other factors.

RESOLUTION: Contact your ElectroSea dealer.

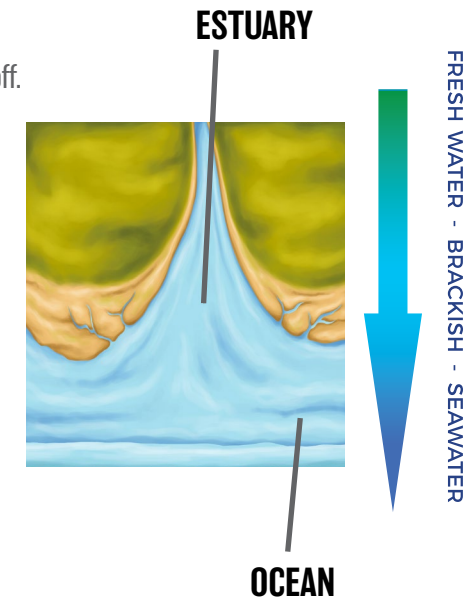


Electrical Connection Overview

1.

ELECTROSTRAINER CONTROL UNIT MUST BE LOCATED WITHIN:

	ES-150	ES-200
Canister Assembly	12 ft. (3.7 m)	20 ft. (6.1 m)
Flow Sensor	12 ft. (3.7 m)	20 ft. (6.1 m)
Power Source	20 ft. (6.1 m)	20 ft. (6.1 m)

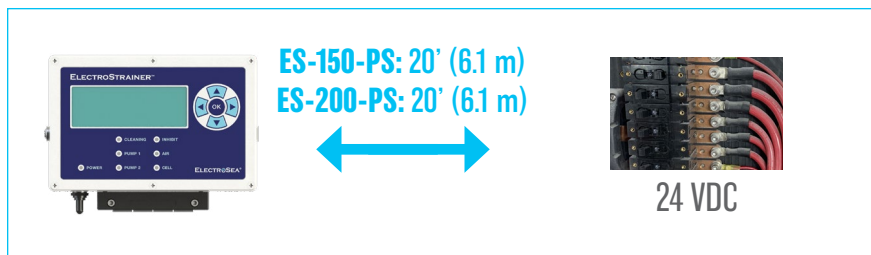

2. The Canister Assembly must be connected to the vessel's bonding circuit.

Bonding wire to
vessel ground



NOTICE

DO NOT cut, extend, or splice the Cell Cable. Longer Cell Cables are available from ElectroSea.

NOTICE

DO NOT connect multiple Cell Cables together. The Cell Extended Cables in the table below show the total cable length from the Control Unit to the Cell.

Modification of the ElectroStrainer Cell Cable will impair operation.


OPTIONAL CABLE ACCESSORIES:

PART NUMBER	DESCRIPTION
CBLO1-CC-EXT-15FT	15' (4.6 m) Cell Extended Cable
CBLO1-CC-EXT-20FT	20' (6.1 m) Cell Extended Cable



Seawater Connection Overview

1. Locate the vessel's seawater intake pump, strainer (if existing), and seacock shut-off valves. Turn OFF ALL seacock shut-off valves in the seawater circuit at or below the waterline. This includes any output seacocks to prevent back siphoning.
2. The Canister Assembly should be installed **before the pump** and **before** any seawater-cooled equipment, such as air conditioners, chillers, etc. **If there is an existing sea strainer, remove it and install the ElectroStrainer Canister in the same location.** The Canister Assembly should be installed at or below the waterline and as close to the thru-hull as possible.
3. A **chlorinated return line** may be connected **after the flow sensor and seawater pump** to return chlorinated seawater directly to the ElectroStrainer Canister Assembly. This will help prevent growth at the inlet of the strainer basket. See page 14 for details.

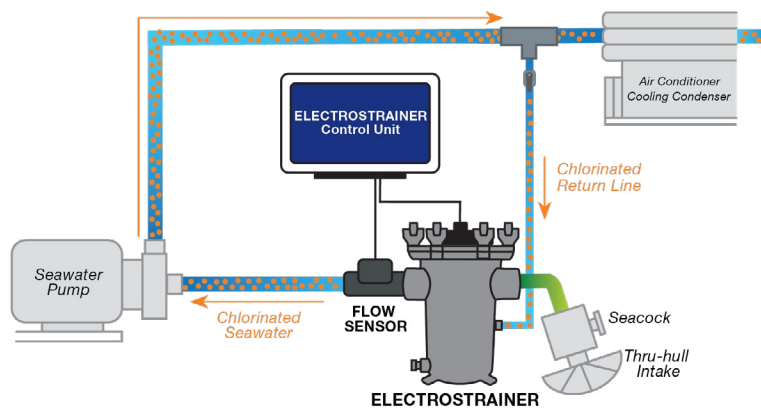

WARNING DO NOT USE DESCALING SOLUTIONS, ACIDS, OR CLEANING CHEMICALS AFTER ELECTROSTRAINER HAS BEEN INSTALLED. THIS WILL DAMAGE THE ELECTROSTRAINER CANISTER ASSEMBLY AND VOID THE WARRANTY.

WARNING Before beginning ElectroStrainer System installation, turn OFF all seacock valves in the seawater circuit.

WARNING Use marine-grade hose and double clamp with two stainless-steel clamps, reversing the clamps. Failure to properly secure seawater connections could result in sinking the vessel.

WARNING DO NOT exceed the ClearCell pressure specifications.

WARNING All seawater plumbing connections must be performed by a qualified marine installation professional.

WARNING PTFE should not be used on plastic connections. Avoid over tightening parts as they may crack and result in sinking the vessel.

NOTICE DO NOT decrease seawater flow below the manufacturer's specifications for downstream cooling equipment.



NOTICE Limit the use of 90° elbows as they restrict flow and cause pressure drop.

NOTICE ElectroStrainer is made of 2205 Duplex Stainless Steel for corrosion resistance. Do not connect dissimilar metals to it if possible.

NOTICE Use only original parts supplied by ElectroSea. They are made of special titanium, stainless, and other high-quality materials. Use of non-factory or substitute parts will void the warranty.

Canister Preparation

1. Loosen the pressure ring by turning the wing nuts counterclockwise.
2. Remove the pressure ring.
3. Remove the Cell Assembly. Lift straight up by the black plastic cover. Do not lift or pull on the cable. Set the Cell Assembly aside in a safe location. Remove the strainer basket. Now you can work with just the Canister for mounting.

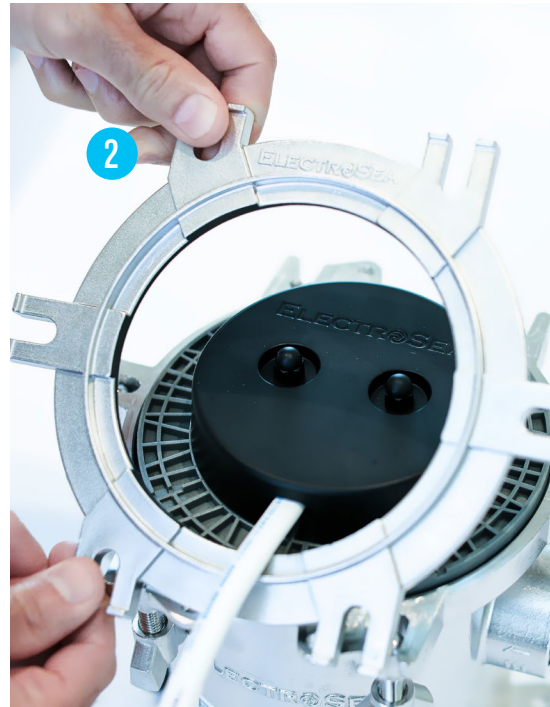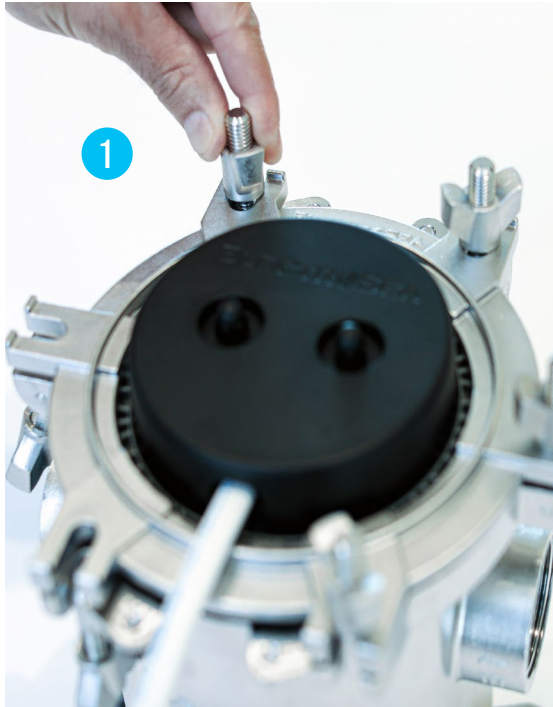

Mounting Options

1. The Canister Assembly must be installed so it is level and at or below the waterline.

WARNING Mount the Canister Assembly level to prevent the accumulation of harmful excess air/gas.

2. The Canister Assembly can be mounted using one of two options as shown below:




OPTION A Base-Tab Mounting



1. Mount Canister to flat, interior engine-room surface.
2. Insert (3) #12 mounting screws into the base tabs to secure the Canister.

WARNING Do not screw through the hull of the boat.

OPTION B Side Mounting

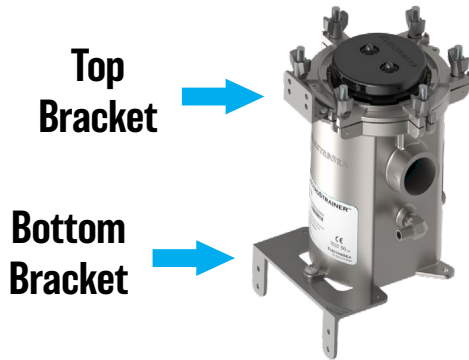

1. Attach top-mount brackets with (2) M5 screws.
2. Attach bottom bracket with (2) M6 screws (front side) or (1) M8 screw (back side).
3. Secure to stringer or other appropriate load-supporting vertical surface with (8) #12 mounting screws.

Canister and Flow Sensor

1. The Canister Assembly has directional IN and OUT labels. Seawater **MUST** enter at the IN port and flow through and exit at the OUT port.


NOTICE Failure to route seawater in the direction of the IN and OUT labels will result in improper operation of the ElectroStrainer System.

2. The ClearVis Flow Sensor has a flow-direction arrow and seawater must enter and exit according to the marked arrow. The ClearVis Flow Sensor **MUST BE** installed on the same seawater line/pipe as the ElectroStrainer Canister. The Flow Sensor tells ElectroStrainer how much chlorine to generate. **DO NOT** install the Flow Sensor on a separate or ancillary seawater line/pipe from ElectroStrainer.

NOTICE The Flow Sensor is made of glass-filled nylon for superior strength; however, this makes the threads less malleable and rougher than other plastics. When sealing to the Flow Sensor, it is recommended that a thread sealant without PTFE is used.

NOTICE The ClearVis Flow Sensor measures the velocity of seawater using speed-of-sound technology. **It is preferable to have 12" (30.5 cm) of straight hose before and after the ClearVis Flow Sensor.** This decreases seawater turbulence and improves the speed, accuracy, and precision of the ClearVis Flow Sensor measurement.

NOTICE **DO NOT place a 90° elbow or other flow-restrictive plumbing fittings immediately after the ClearVis Flow Sensor output.** The Flow Sensor will be unable to obtain a consistent reading, and the Control Unit may be unable to enter the CLEANING mode. The flow sensor can be placed either upstream (suction side) or downstream (pressure side) of the seawater pump that the ElectroStrainer resides on.

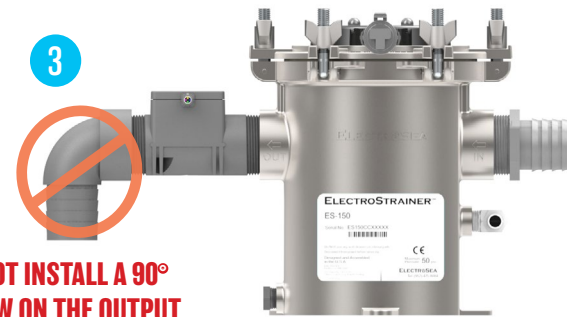

DO NOT INSTALL A 90° ELBOW ON THE OUTPUT OF THE FLOW SENSOR.

Canister and Flow Sensor

There are two options for the location of the ClearVis Flow Sensor:

- The “BEST” location for the ClearVis Flow Sensor is after the Canister output with **at least 12” of straight hose before and after the Flow Sensor**. The ClearVis Flow Sensor can also be installed on the pressure side of the pump.
- An “ACCEPTABLE” location for the ClearVis Flow Sensor is on the output of the ElectroStrainer Canister with **at least 12” of straight hose after the Flow Sensor**.

WARNING All seawater flowing through the ElectroStrainer Canister Assembly must flow through the Flow Sensor. **DO NOT** split or divert seawater before the ClearVis Flow Sensor as this will tell the Control Unit to generate an incorrect amount of chlorine.

- Connect the threaded male or female PVC hose connectors to the ElectroStrainer Canister and/or flow sensor (see picture 3 or 4).
- Use thread sealant without PTFE on all connections.


WARNING PTFE should not be used on plastic parts. Avoid over tightening plastic parts as they may crack and result in sinking the vessel.

- Use two hose clamps, reversing the clamps, over flexible hose connections.
- Add a flexible hose hanger, hose strap, or hose-support bracket within 12” of the ClearVis Flow Sensor to ensure the ClearVis Flow Sensor is supported.

BEST: 12” of straight hose before and after Flow Sensor




ACCEPTABLE: Flow Sensor at ElectroStrainer output with 12” of straight hose after Flow Sensor

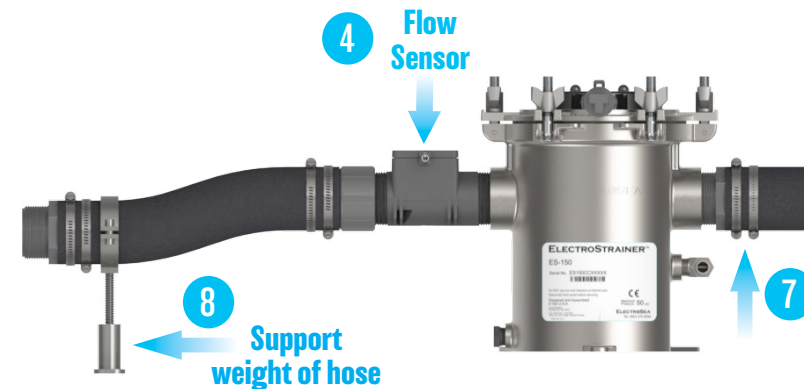


Chlorinated Return Line to Canister

1. To prevent growth at the inlet of the ElectroStrainer basket, a chlorinated return line should be connected from the pressure side of the pump to the Canister Assembly's 90-degree fitting located under the inlet port.
2. Connect this chlorinated return line with a tee-fitting and ball valve to the pressure side of the pump. **Note: The source for the chlorinated return line must be after the seawater pump (on the pressure side) and after the ClearVis Flow Sensor.**
3. Connect the chlorinated return-line tubing supplied with the Canister Assembly to the 90-degree hose barb fitting directly under the inlet port. Secure the tubing with two hose clamps, reversing directions, and clamp securely.
4. Secure the chlorinated return line tubing with the Strain-Relief Clamp. The Strain-Relief Clamp can be connected to the feet or wall bracket. Use the included mounting screw or nut and bolt.

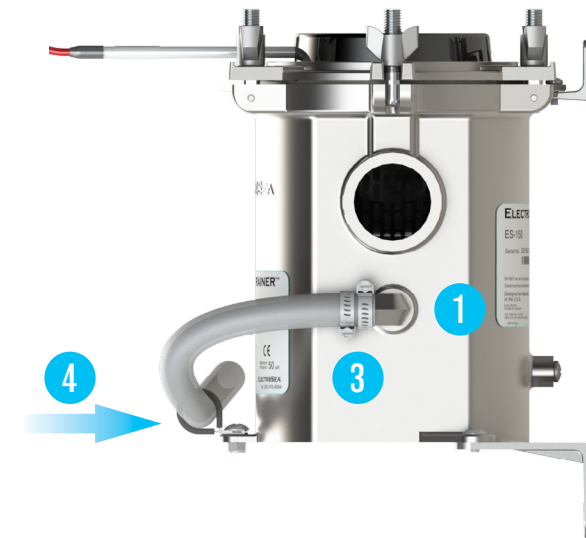

NOTICE ElectroStrainer can be installed without a chlorinated return line. The chlorinated return line provides the greatest protection from biofouling in the strainer basket. **IF THE CHLORINATED RETURN LINE WILL NOT BE USED, USE ONLY THE SPECIAL 2205 ALLOY PLUG PROVIDED. DO NOT USE ANOTHER TYPE OF METAL PLUG.** This will void the warranty. **Note:** There may be a small amount of biogrowth in the strainer basket if the chlorinated return line is not used.

WARNING The chlorinated return line decreases the overall flow rate to downstream equipment. Check downstream equipment flow requirements and **DO NOT** add a chlorinated return line if this will result in low flow to cooling equipment.

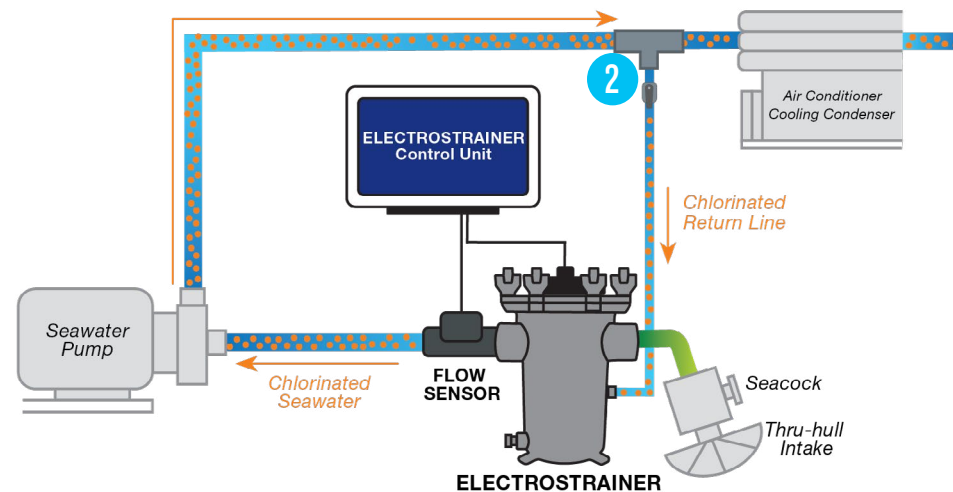


Canister Reassembly

1. Insert the strainer basket into the Canister. Align the flat edge of the basket with the flat edge of the Canister.
2. Confirm the gasket is in the top of the Canister.
3. The Canister and lid are keyed and can be inserted in only one direction. Align the flat edge of the Cell screen and strainer basket. Make sure the lid key is aligned with the Canister, then insert the Cell Assembly into the Canister.

WARNING DO NOT use chemicals, acids, descaling solutions, or zincs in the ElectroStrainer Canister or on the Cell. This will damage the Cell.

4. Add the pressure ring to the top of the Canister. Bleed excess air from the Canister, then tighten down the wing nuts evenly. Do not use tools to perform this tightening process. Work in a star pattern so all wing nuts are evenly secure.
5. Double-check that all fittings, hose clamps, and wing nuts are secure. Open the seacock valves and verify there are no leaks.

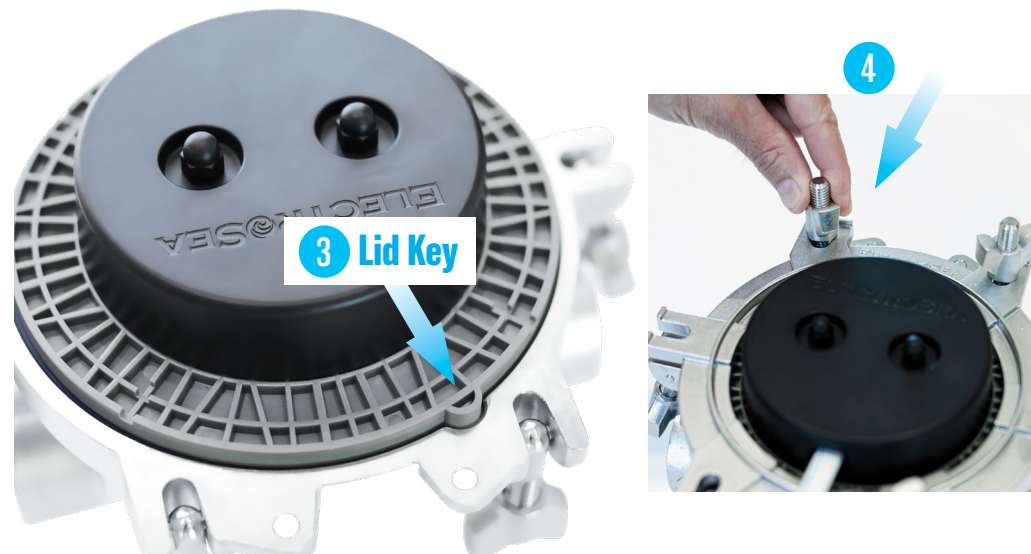

Control Unit Mounting and Wiring

Location and Mounting

1. Mount the ElectroStrainer Control Unit (1) on a bulkhead in the engine room using the four #10 stainless-steel Mounting Screws provided. The Control Unit is designed for marine engine rooms with a maximum environmental temperature of 122 °F (50 °C). Do not mount the Control Unit in an area that receives excessive heat.

Control Unit to 24-VDC Power Supply

2. Power OFF the Control Unit (2) before beginning the wiring process below. Locate an always-on, 24-VDC power source on the vessel. Connect the **RED (+)** and **YELLOW (-)** wires of the Power Cable to this source according to the appropriate electrical standards (i.e., ABYC). Connect the Power Cable (A) to the Control Unit.

NOTICE Failure to Power OFF the Control Unit during the wiring process could result in damage to the ElectroStrainer System.

Control Unit to Canister

3. Connect the Cell Cable (B) between the Control Unit and the Canister.


Control Unit to ClearVis Flow Sensor

4. Connect the Flow Sensor Cable (C) to the Control Unit and the Flow Sensor.

Canister Bonding

5. Connect vessel bonding wire to the Canister bonding terminal according to appropriate bonding standards (i.e., ABYC).

NOTICE Failure to bond ElectroStrainer will void the warranty.

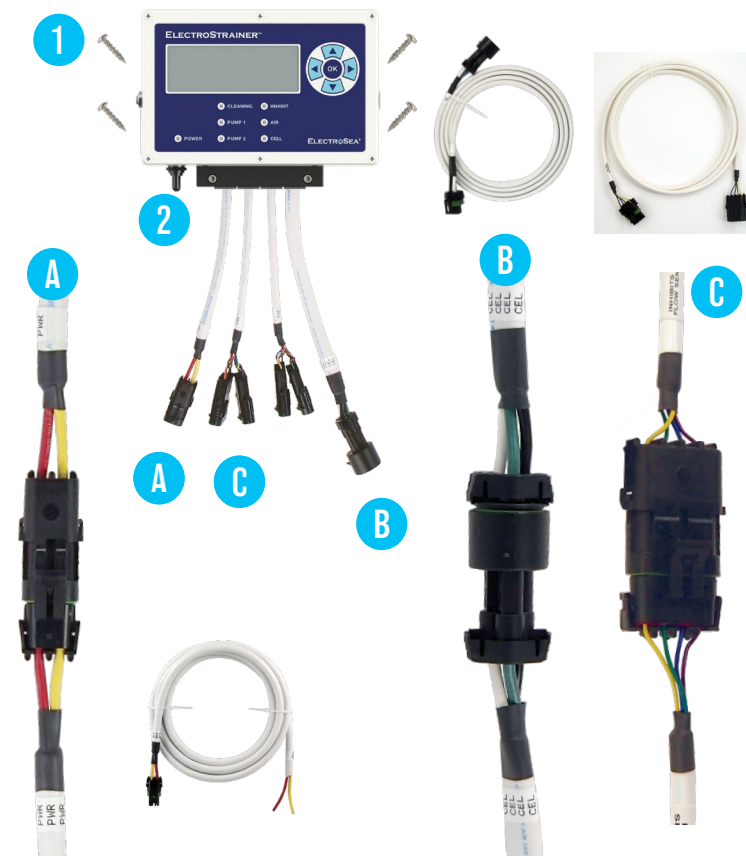

Control Unit Wiring to Inhibit

ElectroStrainer to Inhibit Lines (Reverse Osmosis Water System and Baitwell)

The ElectroStrainer can be wired to receive a signal from one (1) 24-VDC or 12-VDC and one (1) 240-VAC or 120-VAC input from equipment, such as a baitwell or reverse osmosis (RO) system, that are not compatible with chlorine. These wired inputs trigger the ElectroStrainer to “inhibit” (stop) generating chlorine. This is an optional feature and is not required for operation.

1. Locate the baitwell or RO water system controls. See the table below for connection.

Power Type	Wire Color
24 VDC or 12 VDC	Black and Brown
240 VAC or 120 VAC	Red and Orange

2. Connect the Inhibit Cable (D) to the ElectroStrainer Control Unit and the designated RO water system or baitwell equipment.


NOTICE Reverse osmosis (RO) system membranes are easily damaged by chlorine in the feed water. **DO NOT CONNECT THE ELECTROSTRAINER TO AN RO SYSTEM UNLESS THE INHIBIT WIRES ARE CONNECTED TO TURN THE ELECTROSTRAINER OFF WHEN THE RO SYSTEM IS OPERATING.**



D



BAITWELL

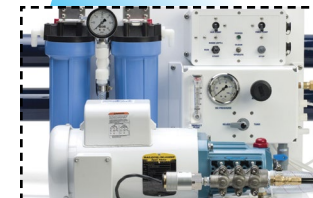

RO WATER MAKER

Pump Mode and Time

The Pump Mode should be set up during the installation process. Refer to the table below to verify the Pump Mode is set correctly. Use the Up or Down arrow to select Pump Mode.

Mode	Description	Wiring Required
Pump Sense Not Used	Pump sensing is not being used. This is the factory default mode. <i>(Note: If your vessel does not have dual pumps and/or cannot be connected to the ElectroStrainer System's automatic pump-cycling feature, then set Pump Mode to "Pump Sense Not Used").</i>	No
Pump#1 and Pump #2 Alternating	Two seawater intake pumps are wired to the ElectroStrainer System. Pump #1 and Pump #2 can be alternated at a specific time duration from 10 minutes to 72 hours. The ElectroStrainer is controlling the ON/OFF operation of both pumps.	Yes
Pump#1 and Pump #2 Monitors	Two seawater intake pumps are wired to the ElectroStrainer System. Pump #1 and Pump #2 can be monitored. The ElectroStrainer is only monitoring and NOT controlling the ON/OFF operation of both pumps.	Yes
Pump #1 ONLY Monitor	One seawater intake pump is wired to the ElectroStrainer System. Pump #1 is used for monitoring purposes only.	Yes

Set Pump Time: This is an optional feature for vessels that have dual seawater intake pumps that are manually cycled. This feature sets the desired duration of time that Pump #1 or Pump #2 operates. The Pump Time can be set to 10 minutes or 1-hour intervals up to 24 hours, 48 hours, and 72 hours. Use the Up or Down arrow to select Pump Time.

FOR VIKING YACHTS

The Pump Mode and Time features automate the manual process of alternating the operation of Pump #1 and Pump #2 for a specific time duration (i.e., every 4 hours). ElectroStrainer alternates seawater pumps when both centralized seawater control switches are in the "OFF" position.

OFF = Default position when ElectroStrainer is operating

AUTO = bypass ElectroStrainer

MANUAL = bypass ElectroStrainer to force pumps ON


Pump-Control Wiring

ElectroStrainer to Seawater Intake Pumps

The ElectroStrainer System includes an option to make a wired connection to the vessel's centralized seawater intake pump(s) for monitoring and/or to control the process of alternating pumps for a specific duration. This optional feature is useful for vessels that have two seawater intake pumps that require scheduled manual cycling. The Pump Mode and Time features automate the manual process of alternating the operation of Pump #1 and Pump #2 for a specific time duration (i.e., every 24 hours).



NOTE: Connection to seawater intake pumps is optional.

1. Locate the seawater intake pump control system to be monitored and controlled. See the table below and wiring diagrams on pages 20-21 for details. Connect the Pump Cable (E) to the ElectroStrainer Control Unit Pump Monitor and the vessel's pump controls.

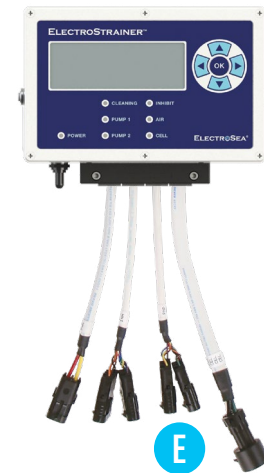


ElectroStrainer Control Unit Cable Wiring Table – Pump Monitor and Control


Wire Name	Wire Color	Wire Description	Pump Switch Wire Connection
Pump #1 Monitor	Black	Switch #1 voltage sensing-normally open relay 1 pole 1 closure	Connect to common (center pin) for switch #1 pole 1
Pump #2 Monitor	Brown	Switch #2 voltage sensing-normally open relay 2 pole 1 closure	Connect to common (center pin) of switch #2 pole 1
Pumps Main Relay	Orange	Common for relay #1 and #2 pole 1	Connects to Auto pin of pole 1
Pumps Secondary Relay	Green	Common for relay #1 and #2 pole 2	Connects to common (center pin) of switch #1 pole 2
Pump #1 On	Blue	Switch #1 voltage sensing-normally open relay 1 pole 2 closure	Connects to common (center pin) of switch #2 pole 2
Pump #2 On	Violet	Switch #2 voltage sensing-normally open relay 2 pole 2 closure	Connects to Auto pin of pole 2
Pump 24 VDC	Red	Positive DC power for switch control	Connect to 24 VDC positive
Negative 24 VDC	Yellow	Negative DC power for switch control	Connect to 24 VDC negative

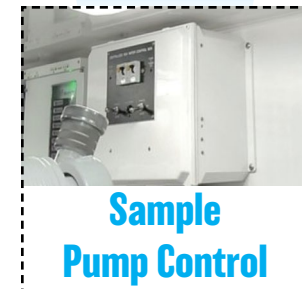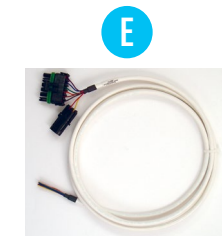

Example ElectroStrainer Pump Control to Viking Centralized Seawater Control System Wiring Schematic

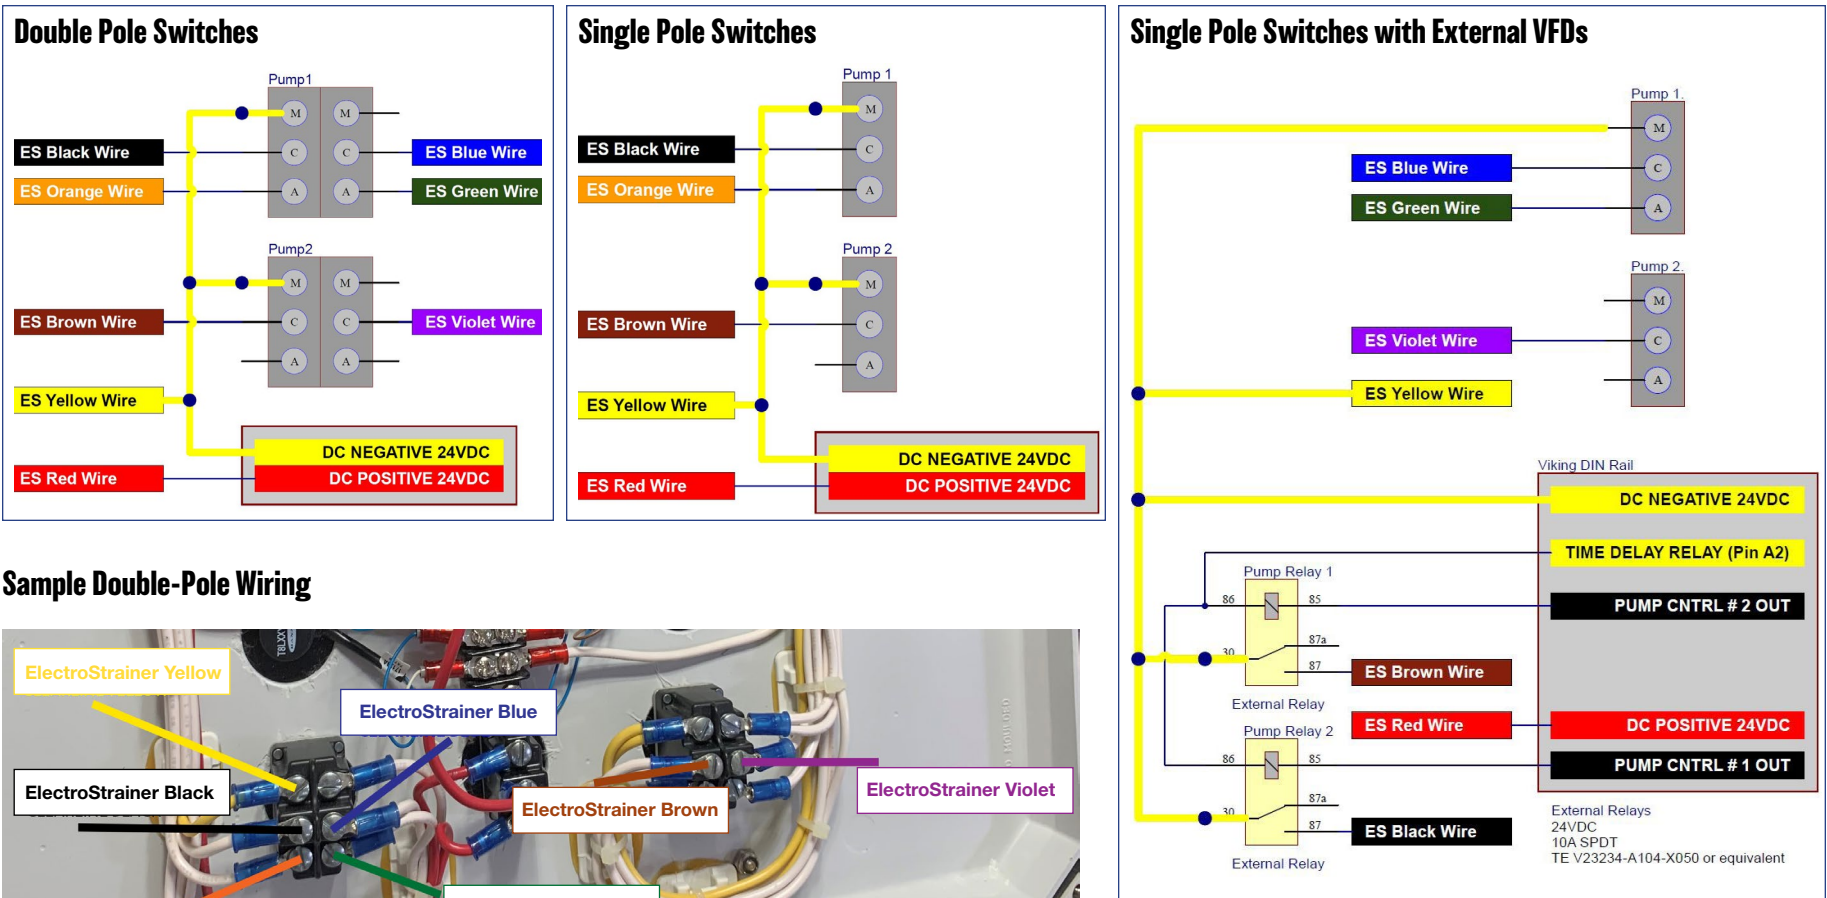

Example ElectroStrainer Pump Control to Viking Centralized Seawater Control System Wiring Schematic

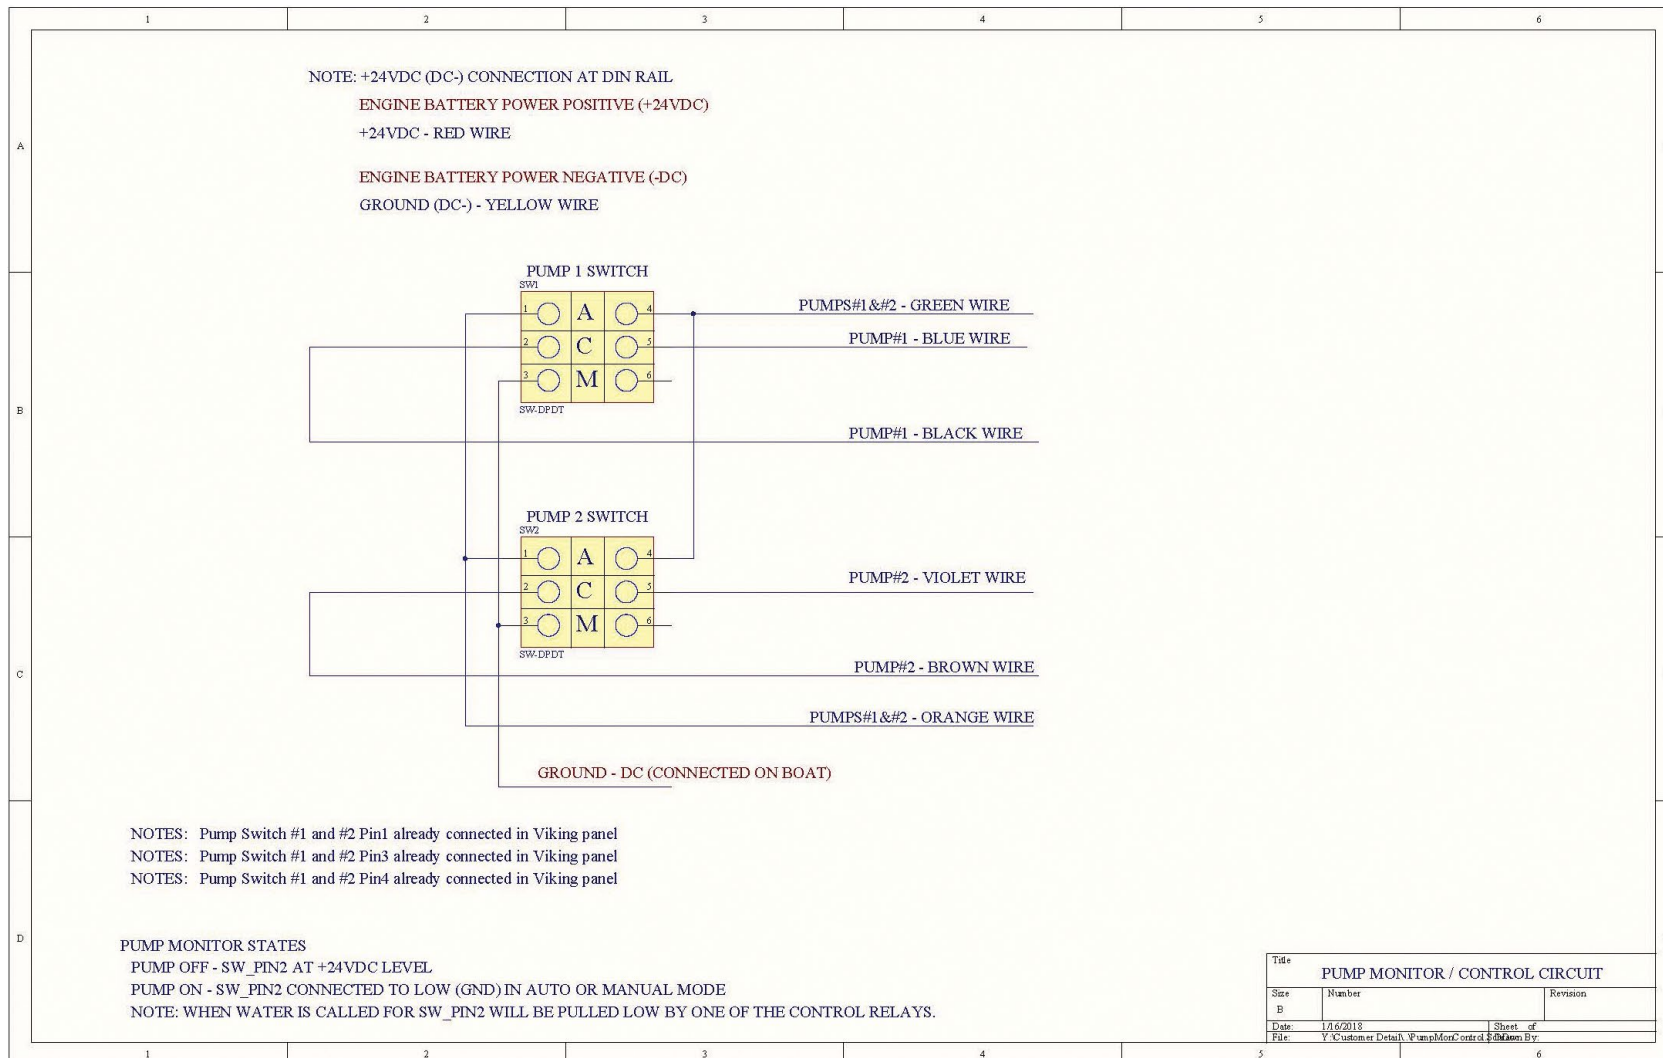

Specifications

	ElectroStrainer Model: ES-200-PS	ElectroStrainer Model: ES-150-PS
ElectroStrainer Control Unit Dimensions (L x W x H)	9.96 x 6.75 x 3.25 inches (252.98 x 171.45 x 82.55 mm)	9.96 x 6.75 x 3.25 inches (252.98 x 171.45 x 82.55 mm)
Weight	4 lb 6 oz (1.98 kg)	4 lb 6 oz (1.98 kg)
Power Source	24 VDC	24 VDC
Power Consumption	Max Power: 100 watts Typical Power: 50 watts	Max Power: 100 watts Typical Power: 50 watts
Internal Circuit Breaker	10 amps	10 amps
Cables Included	Power: 20' (6.1 m) Cell: 20' (6.1 m) Flow Sensor: 20' (6.1 m)	Power: 20' (6.1 m) Cell: 12' (3.7 m) Flow Sensor: 12' (3.7 m)
ElectroStrainer Canister Dimensions (L x W x H)	9.48 x 8.88 x 9.67 inches (240.79 x 225.53 x 245.58 mm)	8.20 x 7.74 x 9.63 inches (208.28 x 196.57 x 244.65 mm)
Inlet / Outlet	2.0 inches NPT (DN50)	1.5 inches NPT (DN40)
Flow Rate	Optimal Flow: 20-40 gpm Min/Max Flow: 10-75 gpm	Optimal Flow: 12-30 gpm Min/Max Flow: 8-50 gpm
Maximum Operating Pressure	70 psi	70 psi

NOTES:

ELECTROSEA[®]



(888) 384-8881
(952) 475-8084



support@electrosea.com
www.electrosea.com